

Viceroy Window Operator Retrofit Instructions

Please read all instructions before starting.


Remove old operator and mounting plate (all must go)

Keep the screw that joins the corner link arm to the operator arm.

Drill a 5/16" hole towards the hinge side, exactly 5" from the end of the oblong hole (see sketch)

The hole centers are exactly 5" apart. Mount the new operator using the truss head screws supplied, one end goes into the end of the oblong hole the other into the new hole drilled. Attach the corner link arm to the operator arm using the original screw, the window should work. Lubricate the hinges for better results.

Left hand shown

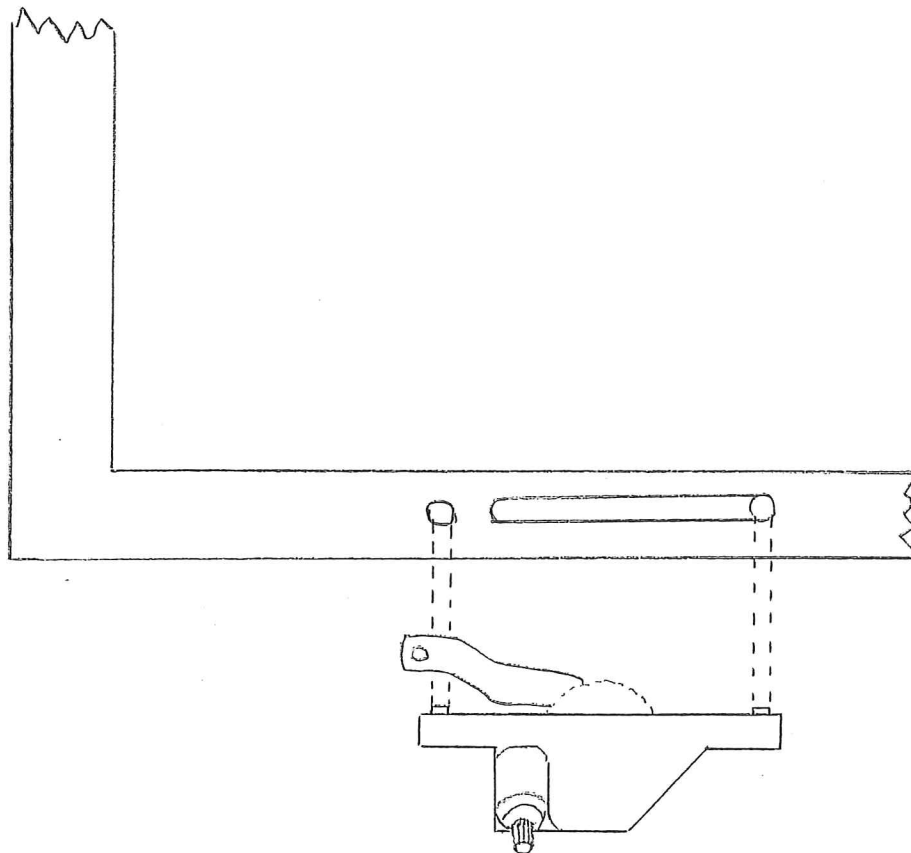

Viceroy Window Operator Retrofit Instructions

Please read all instructions before starting.

Remove old operator and mounting plate (all must go)

Keep the screw that joins the corner link arm to the operator arm.

Drill a 5/16" hole towards the hinge side, exactly 5" from the end of the oblong hole (see sketch)

The hole centers are exactly 5" apart. Mount the new operator using the truss head screws supplied, one end goes into the end of the oblong hole the other into the new hole drilled. Attach the corner link arm to the operator arm using the original screw, the window should work. Lubricate the hinges for better results.

Right hand shown

